

## EHD Components 2005 (Pty) Ltd

**E-mail:**

JHB: ehd@ehd.co.za  
CPT: ehdcapetown@ehd.co.za  
DBN: ehd.dbn@ehd.co.za  
BLOEM: ehdbloem@ehd.co.za

**Contact Number:**

JHB: +27 (0)11 870 5000  
CPT: +27 (0)21 510 0567  
DBN: +27 (0)31 700 1160  
BLOEM: +27 (0)51 430 5404

Automatic mains failure panel

## Automatic mains failure panel

Generator controller monitor water temperature and cut out on engine temperature  
Generator controller monitor oil pressure and cut off on low oil pressure  
Controller monitor over generator voltage on all three phase  
Controller monitor over load per phase and cut generator set  
Controller monitor unbalanced phases  
Controller can be configured for 3 phase or single phase  
Controller can be set to do an automatic change over

### Disclaimer

Manufacturer's names, numbers, symbols, photos and descriptions are used for reference purposes only and it is not implied that the parts referred to are the products of those manufacturers

Source: [www.ehd.co.za](http://www.ehd.co.za)